

# Hi! Let's get started.

# HITACHI • Roku TV

Model: 43R51/32R21

## Your easy way to endless entertainment

Connect now to get the most out of your Hitachi Roku TV



### Simple, Intuitive Interface

Start streaming\* your favorite shows. Access your cable box or HDTV antenna. Even fire up your gaming console - all from your home screen.

\*A paid subscription or other payments may be required for some channels. Channel availability subject to change and varies by country. Check with individual channel provider for internet connection speeds required to stream or access HD content.



### Fast and easy search

Search for movies, TV shows, actors, and directors across top streaming channels and quickly compare viewing and price options.



### Free mobile app for iOS and Android

Control with included remote or free Roku Mobile app. Use your tablet or smart phone as a remote, plug in headphones for private listening, or use your voice for search. \*\*

\*\*Limitations apply for the Roku mobile app. Please see support.roku.com for device compatibility information.



### Send to the big screen

Easily share photos, videos, and music from your compatible smartphone or tablet right to your Roku TV. \*\*

## What's in the box



Hitachi Roku TV




TV stand



4 Screws



TV remote

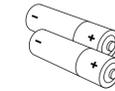

2 x AAA batteries for remote

## What you need



Phillips head screwdriver



Wireless router (needed for streaming)



Computer, tablet, or smart phone (needed for setup)



Internet connection (needed for streaming)

For optional support, please see Owner's Guide at: [www.hitachi.us/tv](http://www.hitachi.us/tv)

## Step 1 Set up your TV

Ready for the step-by-step? You're only minutes away from TV bliss!

### Remove your TV from the box

Be careful, it's heavy!

### To mount on a wall\*

Follow the instructions that come with the wall mount.


\*Wall mount sold separately.

### To use the stand

**A** To prevent damage to the screen, carefully place your TV on a soft, cushioned surface.

**B** Put the stands into the TV, align the stands with the screw holes located on the TV.

**C** Secure the stands to the TV with four (4) screws.

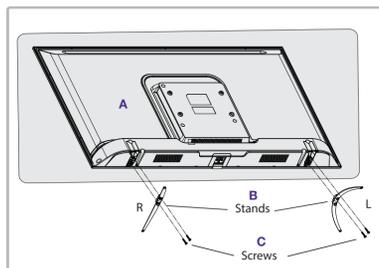

## Step 2 Power up

In this step, we'll make sure all systems are GO!

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

Connect your power cord to the TV, then plug it in to the wall outlet.

**Power Tip!** Always replace dead batteries with two brand-new batteries from the same manufacturer. Never use damaged batteries. If your remote gets warm/hot during use, discontinue use and contact customer support immediately at [www.hitachi.us/tv](http://www.hitachi.us/tv).




## Step 3 Grab your remote

The TV remote should feel right at home in your hand. It was designed to be incredibly intuitive for watching TV and navigating on-screen menus.

Here are some buttons you should know about.

- A** POWER Turn TV on and off
- B** BACK Return to previous screen
- C** HOME Return to Roku Home screen
- D** VOLUME Raise and lower volume
- E** INSTANT REPLAY Replay the last few seconds of streaming video
- F** OPTIONS View more options
- G** RWD SCAN Rewind streaming video, scroll left one page at a time
- H** FWD SCAN Fast forward streaming video, scroll right one page at a time
- I** LIVE TV PAUSE Activate and use the Live TV Pause when a 16 GB USB drive is attached to the TV.
- J** D-PAD LEFT Brings up the Smart Guide (EPG) while watching Antenna TV.

**Tip!** The **OK** button gives you easy access to picture settings, display options, and more. Try it on every screen!

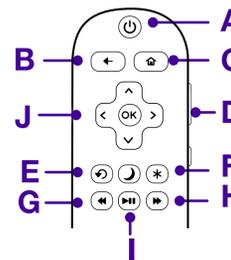

### Live TV



**D-Pad Left:** Brings up the Smart Guide (EPG) while watching Antenna TV.

**Play/Pause:** Pauses and resumes Live TV while watching Antenna TV.

**REW:** Rewinds the paused Live TV Pause buffer.

**D-Pad Left and D-Pad Right:** Choose scenes while using Live TV Pause.

## Get to know your TV

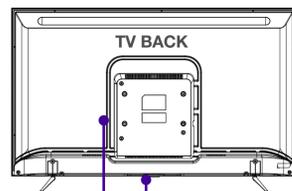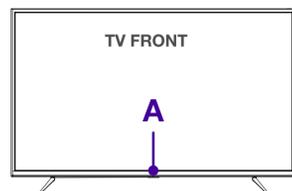

SIDE



**A** STATUS LIGHT Glows when the TV is in standby, flashes when the TV is busy, flashes once with each button press of the remote control.

**IR RECEIVER** Receives signal from the TV remote.

**B** POWER BUTTON Press and hold for power on/off.

**C** DIGITAL AUDIO OUT Connect an optical cable to an external digital audio system.

**D** HEADPHONE OUT Connect headphones or other external speakers.

**E** RESET BUTTON Press and hold for factory reset. Careful, you will lose all your settings!

**F** 2 HDMI PORTS Connect cable box, Blu-ray player, gaming console, or other devices to your TV using HDMI cables.

**G** COMPOSITE AV IN If your device isn't able to connect using HDMI®, connect to your TV using standard red/white/yellow cables.

**H** AIR/CABLE IN Connect Cable TV feed or an outdoor VHF/UHF antenna.

**I** HDMI ARC PORT Connect HDMI ARC (audio return channel) capable audio devices like sound bars or AV receivers.

**J** USB PORT Connect a USB device for browsing photos, music and movies.



## Connecting brings out your TV's full potential!

You'll have access to thousands of streaming channels\*.

### Make any night a movie night

Choose from over 500,000+ movies and TV episodes, across all major streaming movie channels like Netflix, Amazon Video, Google Play, VUDU, and more.

### Stream sports on the big screen

Choose from over 140 sports channels like WatchESPN, FOX Sports Go, NBA, NFL, MLB, WWE, CBS Sports, and more.

### Explore your passions

In addition to popular streaming channels like HBO NOW, SHOWTIME, PBS Kids, and FOX NOW, your Roku TV also offers hundreds of streaming channels to fuel your passions - including fitness, cooking, religion, outdoors, international programming, and much more.

### Hundreds of free channels

Watch free Hollywood hits on The Roku Channel—no subscriptions or logins required. Plus, channels like Crackle, YouTube, PBS KIDS, and CBS News offer even more free movies, news, and TV shows.

\*A paid subscription or other payments may be required for some channels. Channel availability subject to change and varies by country. Check with individual channel provider for internet connection speeds required to stream or access 720p content.

## Troubleshooting

Having trouble completing the guided setup? Don't worry, it's usually an easy fix.

### Problems connecting my cable/satellite box

- For best performance, use the HDMI connection.
- Make sure the cable connections to the TV and your device are securely fastened.
- Select the corresponding HDMI input.

### My picture is too small (black bars on the side)

- Play your movie/video and press the **OK** asterisk button.
- Select **Picture size**, select the picture size of your preference.

### If the TV remote control isn't working

- Remove any obstruction and point the remote at the TV's IR receiver (see Get to know your TV).
- Try a fresh set of batteries.

### Problems connecting an antenna through a coaxial cable

- Securely connect the coaxial cable from your antenna.
- Select **Antenna TV** input. Then Select **Start finding channels** and follow the on-screen instructions to perform a full channel scan.

### Cannot connect to wireless network (Wi-Fi)

- Select the correct wireless network name and verify the password entered (case sensitive).
- Relocate the router from objects that interfere with performance (cordless phones, baby monitors, etc. ).
- Reboot the router by disconnecting the power for more than 2 minutes and reconnect.

**Need more help?** [www.hitachi.us/tv](http://www.hitachi.us/tv) 800.HITACHI (800.448.2244)

To better support you, please have your model and serial number ready.

©Hitachi America, Ltd.  
© 2018 Hitachi America, Ltd. and Roku, Inc.  
All material in this Quick Start Guide is provided by Hitachi America, Ltd. and Roku, Inc. and their respective subsidiaries, affiliates and licensors and is protected under U.S. and international copyright and/or other intellectual property laws. Reproduction or transmission of the materials, in whole or in part, in any manner, electronic, print, or otherwise, without the prior written consent of Hitachi America, Ltd. and Roku, Inc. is a violation of the rights of Hitachi America, Ltd. and Roku, Inc. under the aforementioned laws.

© 2018 Roku, Inc. All rights reserved. ROKU, ROKU TV and the ROKU logo are the trademarks or registered trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.