

Discrete Codes – DW3

<b>RC KEY</b>	<b>FUNCTION</b>	<b>HEX CODE</b>
#1	Input1	50AF 21DE
#2	Input2	50AF 22DD
#3	Input3	50AF 23DC
#4	Input Front	50AF 24DB
#5	HDMI1	50AF 3DC2
#6	HDMI2	50AF 20DF
#7	HDMI Front	50AF 25DA
VOL DOWN	Air (or Cable)	50AF 7689
GUIDE	Photo Input	50AF 6B94
#9	Aspect 4:3 Expanded	50AF 6897
INPUTS	Aspect 4:3 Zoom1	50AF 6996
#8	Aspect 4:3 Zoom2	50AF 6A95
#0	Power OFF	50AF 3FC0
- (DASH)	Power ON	50AF 3EC1
INFO	Day (Dynamic)	50AF 6C93
ASPECT	Aspect 16:9 STD1	50AF 659A
CH UP	Aspect 16:9 STD2	50AF 7788
CH DOWN	CC toggle	50AF 7887
MENU	Day (Normal)	50AF 748B
EXIT	Night	50AF 758A
C.C.	Aspect 16:9 Zoom	50AF 6699
DAY/NIGHT	Aspect 4:3 Standard	50AF 6798

Instructions to access the Discrete Mode Layer in RC (HL02401, HL02402, HL02403)

- 1) Set the RC to TV Mode
- 2) Press and hold the Source Select key
- 3) While holding the Source Select key enter MENU and LAST CH in sequence
- 4) Release the Source Select key
- 5) If the user is successful the TV LED will blink 3 times and the RC will be locked to TV mode

Instructions to exit the Discrete Mode Layer in RC (HL02401, HL02402, HL02403)

- 1) Set the RC to TV Mode
- 2) Press and hold the Source Select key
- 3) While holding the Source Select key enter 1, 6, 4, 3 in sequence
- 4) Release the Source Select key
- 5) If the user is successful the TV LED will blink 3 times and all device modes on the RC will be accessible.