

No.	Key Label	Custom Code	Key Code
1	POWER	50AF	17E8
2	INPUT	50AF	09F6
3	ASPECT	50AF	6F90
4	SLEEP	50AF	13EC
5	1	50AF	0DF2
6	2	50AF	0EF1
7	3	50AF	0FF0
8	4	50AF	1CE3
9	5	50AF	1DE2
10	6	50AF	1EE1
11	7	50AF	1FE0
12	8	50AF	04FB
13	9	50AF	05FA
14	0	50AF	0CF3
15	DASH (-) / DISPLAY	50AF	11EE
16	VOL +	50AF	12ED
17	VOL -	50AF	15EA
18	MUTE	50AF	0BF4
19	AUDIO	50AF	08F7
20	RETURN	50AF	E01F
21	REPEAT A-B	50AF	E11E
22	ANGLE	50AF	E21D
23	MARKER	50AF	E31C
24	JUMP	50AF	E41B
25	LAST CH / ZOOM	50AF	0AF5
26	C.C./SUBTITLE	50AF	7887
27	MENU	50AF	53AC
28	DVD MENU	50AF	E619
29	EXIT / CANCEL	50AF	649B
30	TOP MENU	50AF	E718
31	CURSOR UP / CH UP	50AF	28D7
32	CURSOR DOWN / CH DOWN	50AF	29D6
33	CURSOR LEFT	50AF	738C
34	CURSOR RIGHT	50AF	728D
35	ENTER	50AF	2ED1
36	EJECT	50AF	E817
37	STOP	50AF	49B6
38	PAUSE	50AF	619E
39	PLAY	50AF	46B9
40	SEARCH REVERSE	50AF	45BA
41	SEARCH FORWARD	50AF	47B8
42	SKIP REVERSE	50AF	50AF
43	SKIP FORWARD	50AF	52AD
44	SLOW REVERSE	50AF	E916
45	SLOW FORWARD	50AF	EA15
46	TV/DVD	50AF	EB14
47	PLAY MODE	50AF	EC13

